



# Attention!



**IR reception is disabled on the DVS 510 Series by default.**

**To enable IR control**, send the Simple Instruction Set (SIS™) command **65\*1#** using RS-232/RS-422 or Ethernet. The unit responds with IRDisable1↵.

Other SIS commands for the DVS 510 and the DVS 510 SA include:

Command	ASCII Command	Unit Response	Additional Description
Enable IR receiver	65*1#	IRDisable1 ↵	Enable the IR receiver.
Disable IR receiver	65*0#	IRDisable0 ↵	Disable the IR receiver (default).
View IR receiver status	65#	X10 ↵	For X10: 0 = off; 1 = on
Set lock mode 1	1X	Exe 1 ↵	Lock entire front panel.
Set lock mode 2	2X	Exe 2 ↵	Allow only input switching, PIP, volume control, and Auto-Image.
Disable	0X	Exe 0 ↵	Allow all front panel adjustments.
View lock mode	X	X59 ↵	For X59: 0 = disabled, 1 = mode 1, 2 = mode 2